



Refer to your user guide pages 1-17 thru 1-30.

The Title bar refers to the name of the current application running and the file opened.

The Menu bar allows access to drop-down menus for the following headers; File, Edit, Layout, Arrange, Machine, Transform, Image, View, Options, And Help.

The Customizable Tool Palette is used to organize frequently used commands in Torchmate CAD. The Palette is located just below the Menu bar. By double clicking on the far right part of the palette that does contain any tabs, the customizable toolbar will open to allow the user to further customize the palette by adding, deleting, or rearranging these tabs.

The Status Bar located just below the Tool Palette, shows the type of object, number of objects selected, X & Y coordinates, Width & Height, Object scale, Aspect Ratio or Pro Scale, Degree of Rotation, and object color.

The Tool Bar located along the left side of the window, shows all the available tools containing flyout controls for manipulating objects. Depending on the version of Torchmate CAD, the number of flyout controls tools may differ. Each tool will be discussed in the following chapters.

The Color Palette